


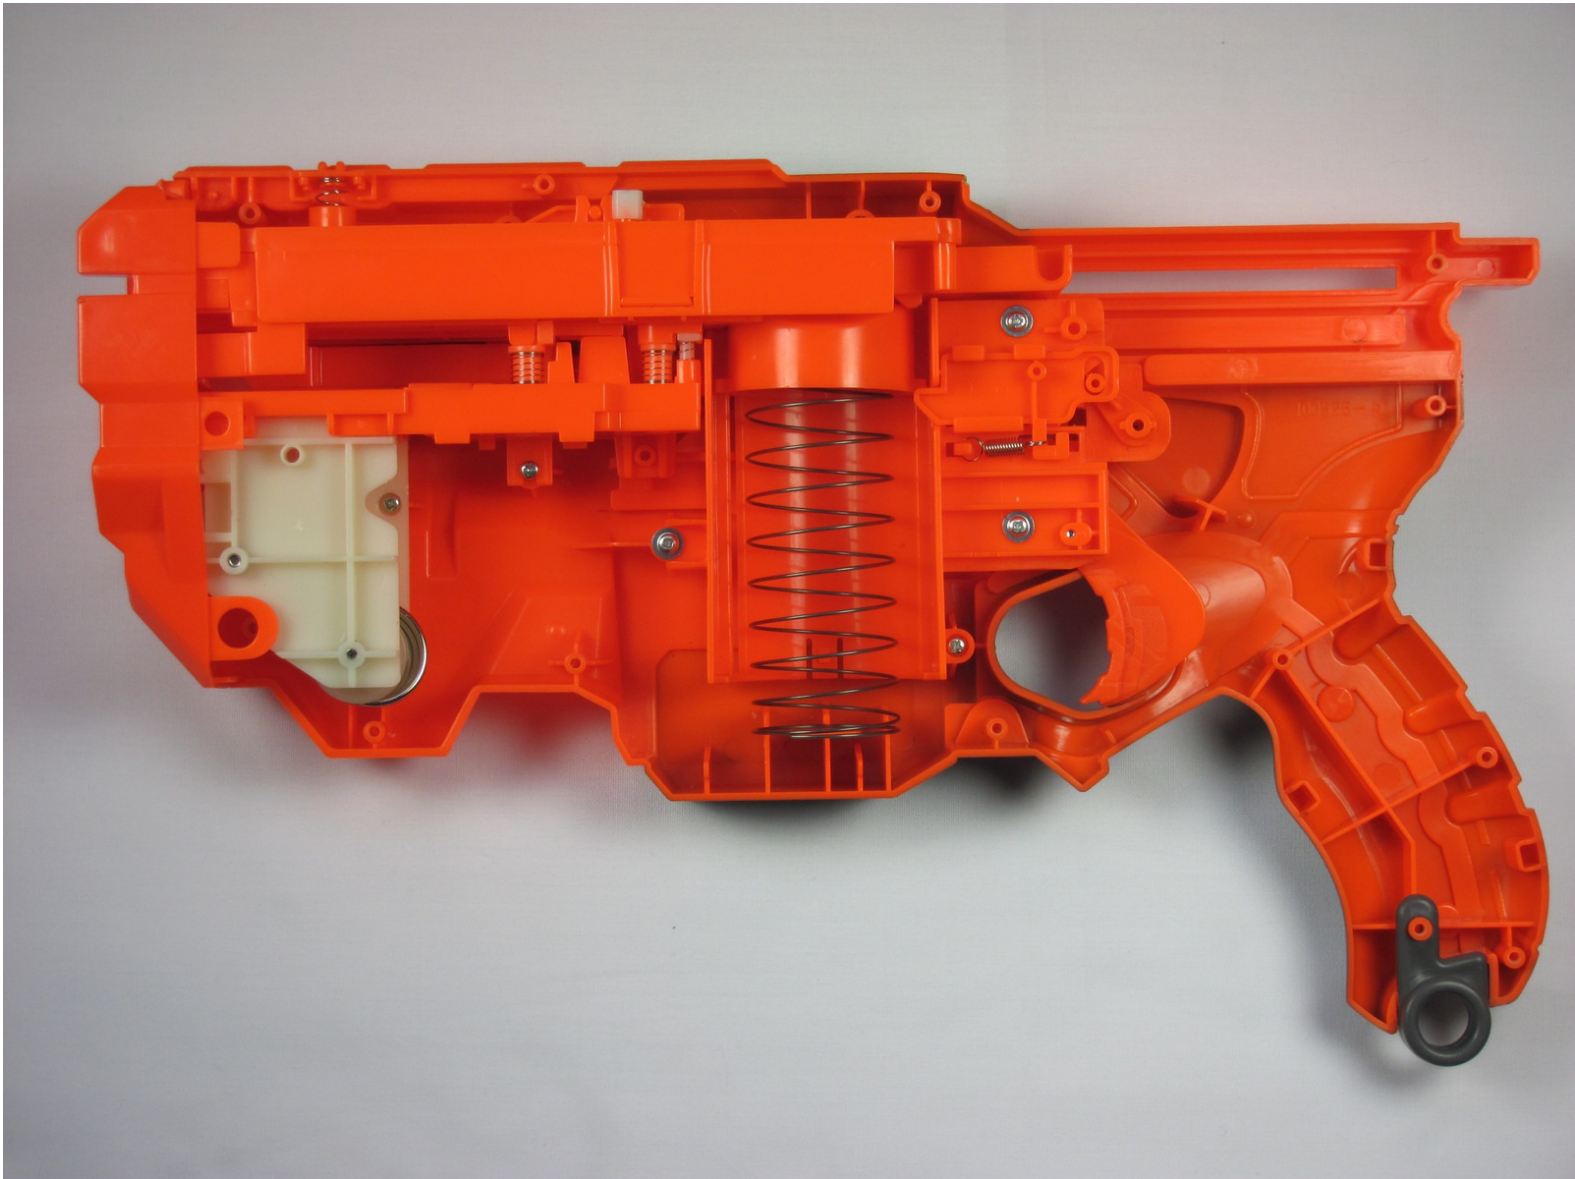


# Disassembling Nerf Vortex Vigilon Inner Mechanism

Prerequisite only.

Written By: Cara Pew






## Step 1 — Removing the inner mechanism's screws

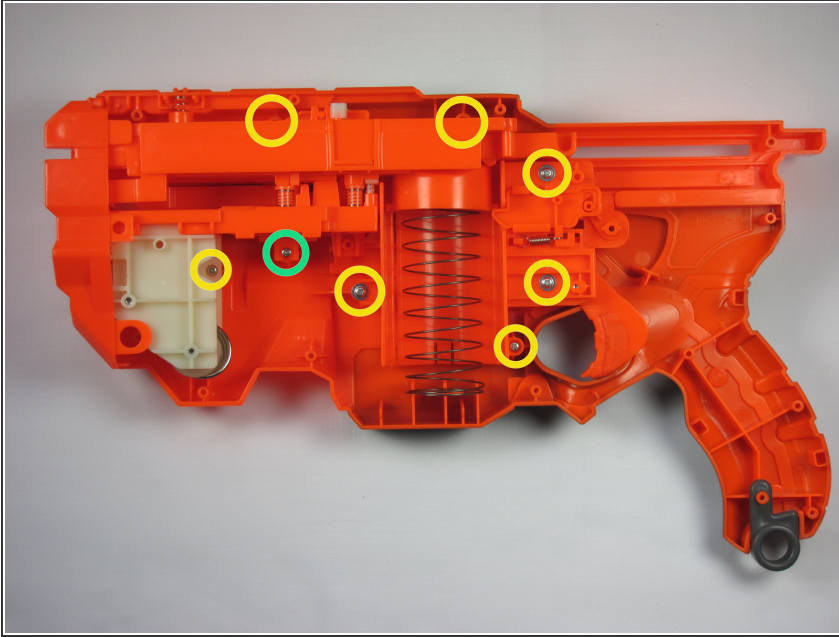


- Remove the seven #00 1 cm Phillips screws that attach the inner mechanism to the back cover.
- Remove the #00 1.2 cm Phillips screw located to the right of the white casing.

## Step 2 — Removing the front cover

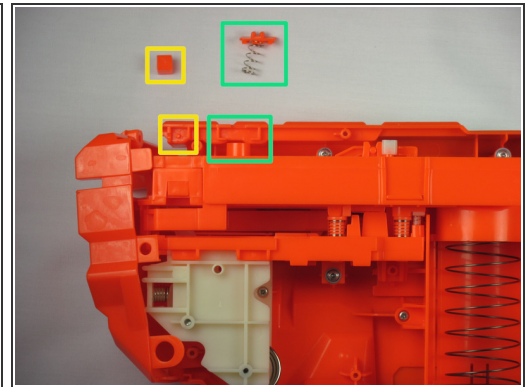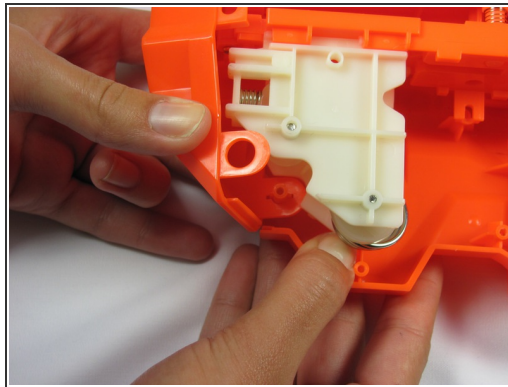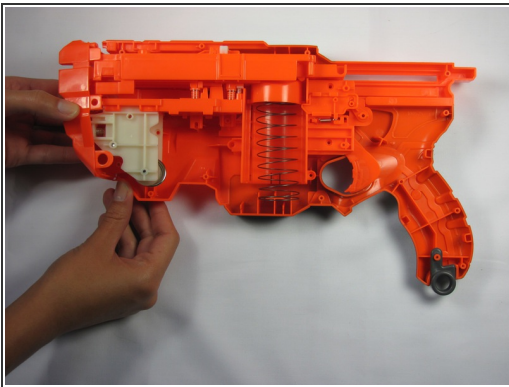

- i** An orange block will likely fall out as you remove the front cover. The clip and spring will fall out as well, if they have not already.
- Wiggle the front cover out from under the white piece and lift up from the gun.
- i** Pulling the cover off is tricky due to its inner fitting.
- ⚠** Be sure to replace the orange block, spring, and clip before this step in reassembly.

## Step 3 — Removing the inner mechanism

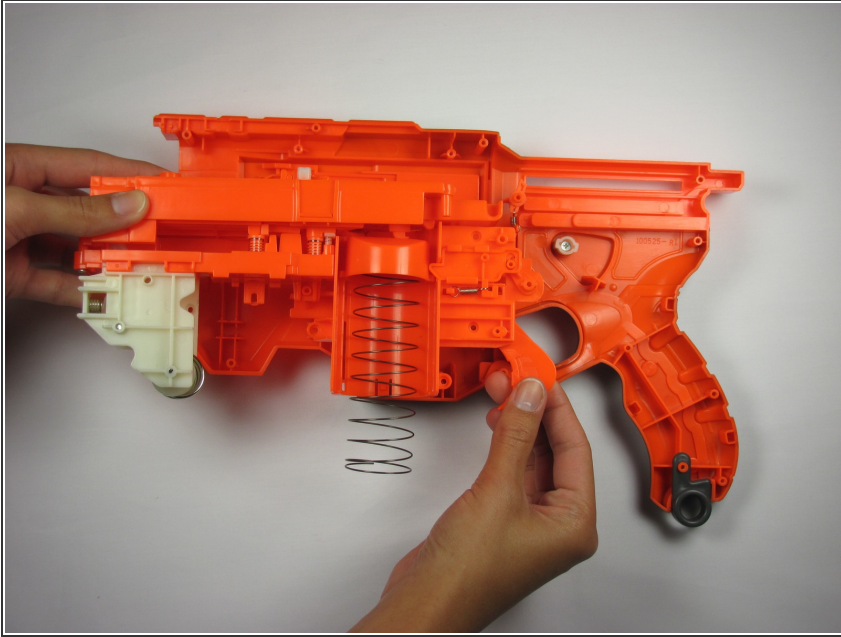

- ⓘ The spring, cap, and rotating lever will likely fall out as you remove the inner mechanism.
- Disconnect the inner mechanism from the outer cover by lifting the inner mechanism towards you.
- ★ Be sure to replace the spring, cap, and rotating lever before this step in reassembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 05:00:42 AM.